PET718

Portable DVD Player

Register your product and get support at
Registre su producto y obtenga asistencia en
Cadastre seu produto e obtenha suporte em
www.philips.com/welcome

User Manual

Manual de usuario

Manual do usuário

PHILIPS

Downloaded From Disc-Player.com Philips Manuals

1

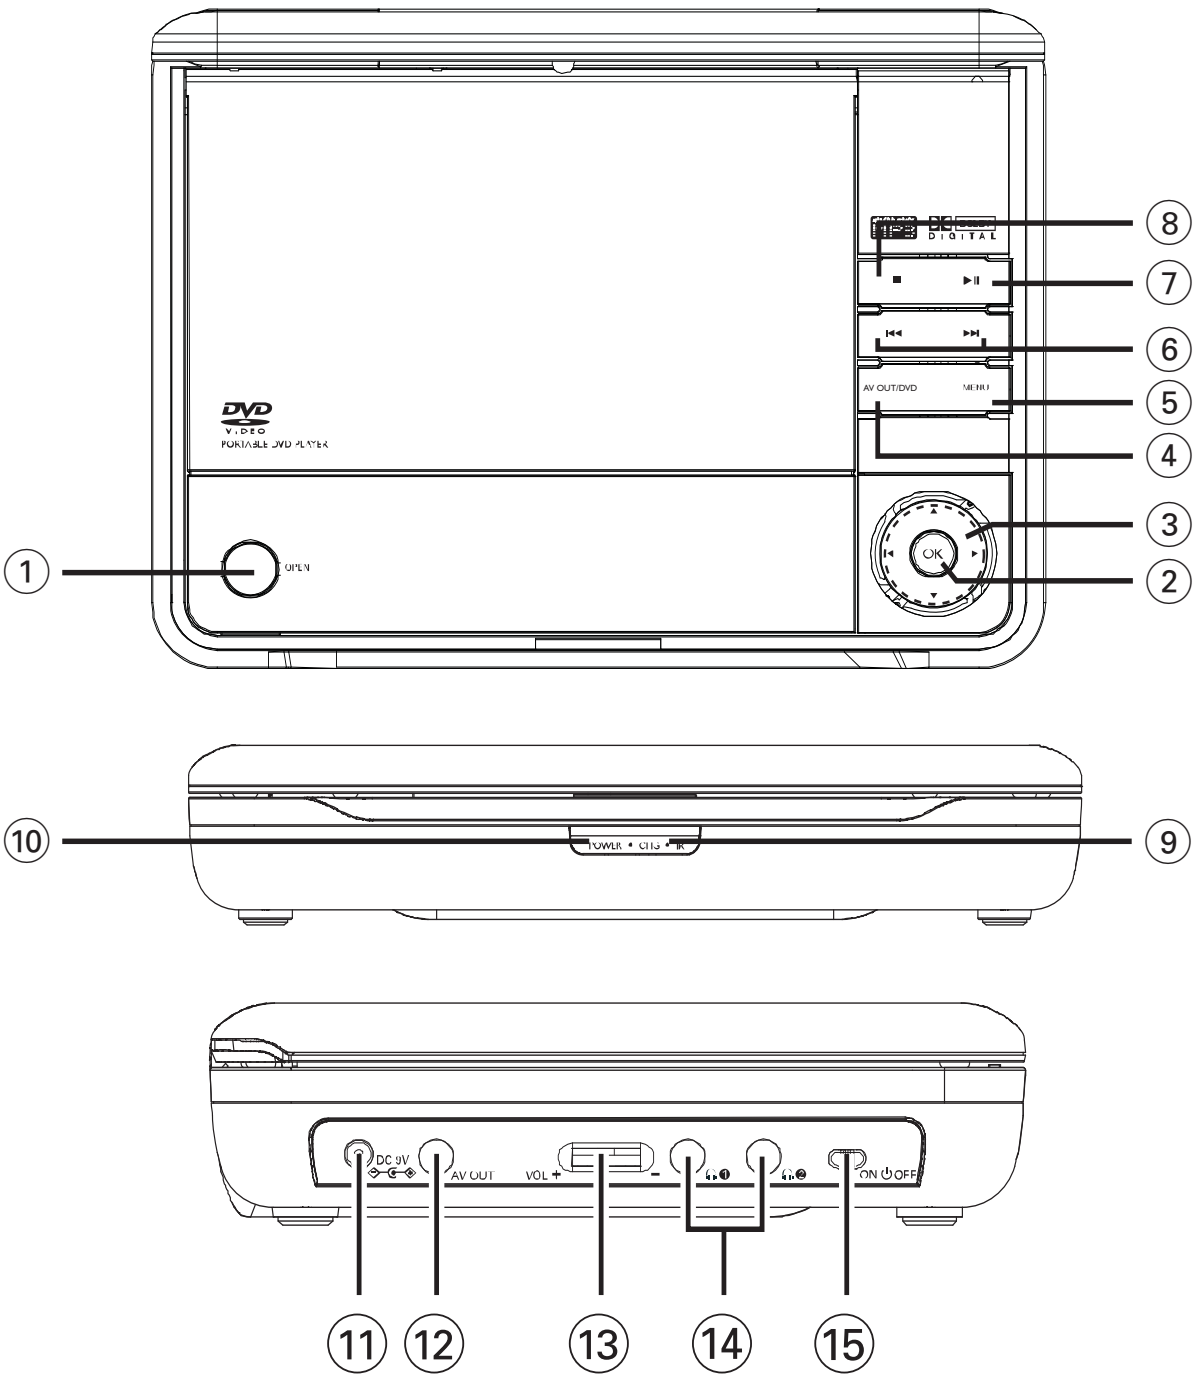

Downloaded From Disc-Player.com Philips Manuals

2

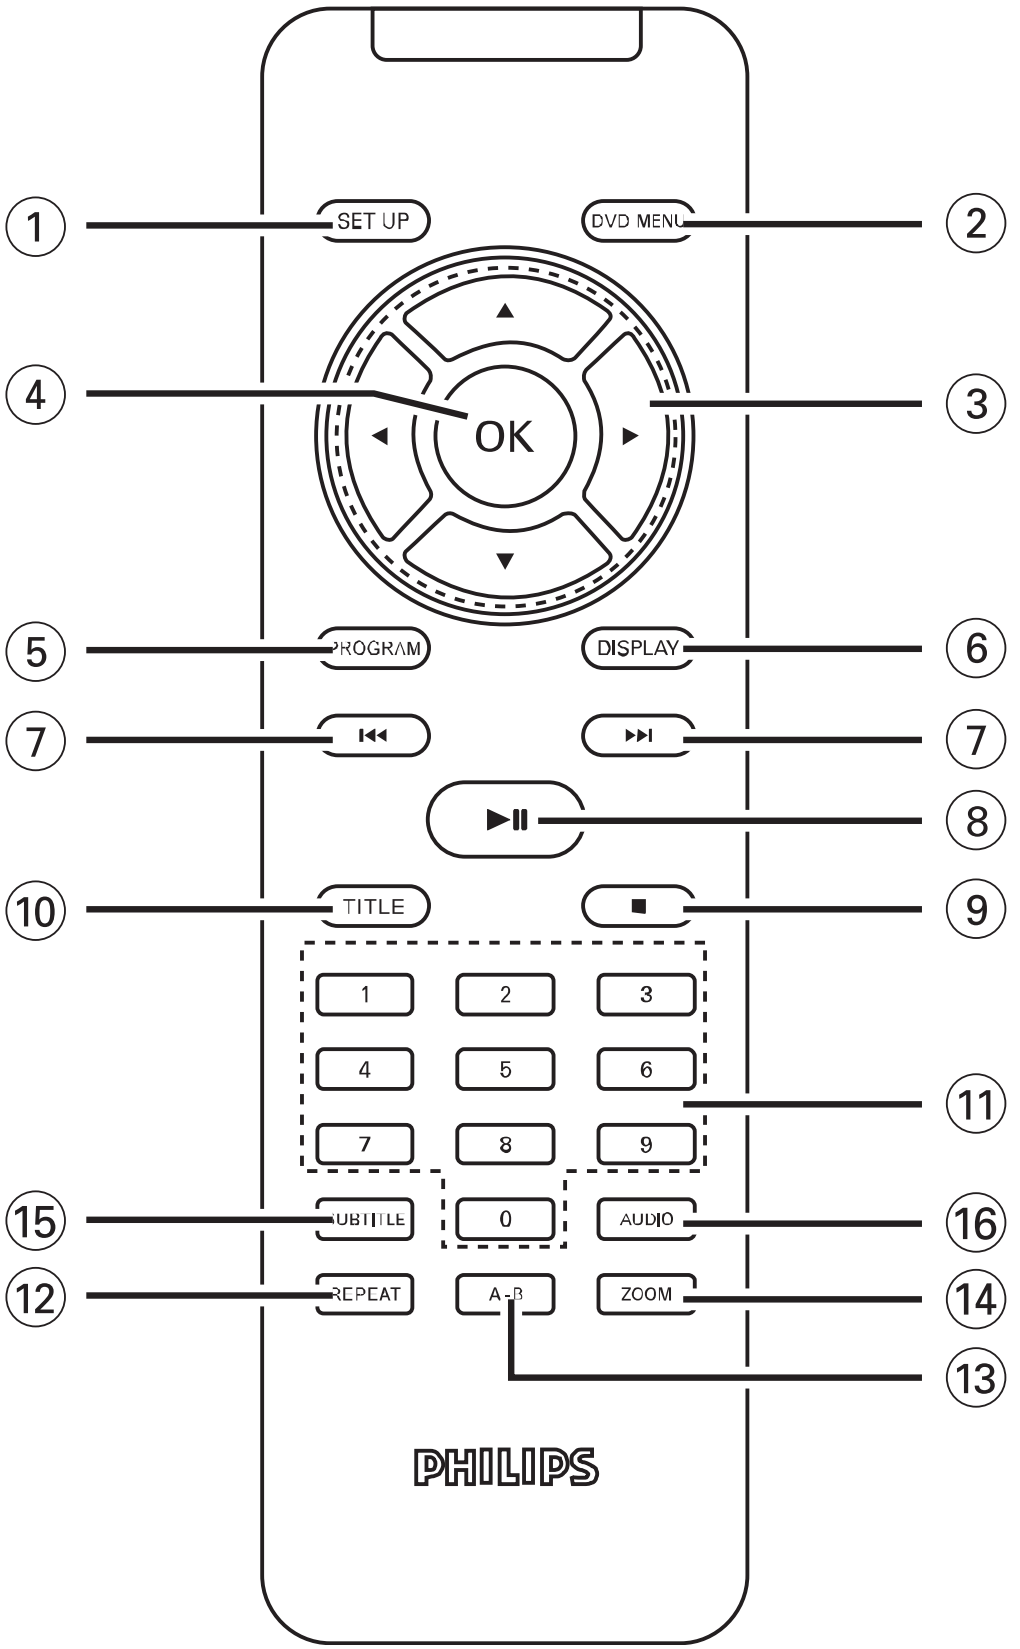

Downloaded From Disc-Player.com Philips Manuals

Mexico

NOM-NYCE

Es necesario que lea cuidadosamente su instructivo de manejo.

PRECAUCIÓN - ADVERTENCIA
No abrir, riesgo de choque eléctrico
ATENCIÓN
Verifique que el voltaje de alimentación sea el requerido para su aparato
Para evitar el riesgo de choque eléctrico, no quite la tapa.
En caso de requerir servicio, dirijase al personal calificado.

Modelo:	**PET718/55**
Descripción:	Adaptador ca/cc
Alimentación:	**100–240V~ 50–60 Hz 9,0Vcc 2,0A**
Descripción:	Reproductor de DVD portátil
Alimentación:	**9,0Vcc 2,0A**
Consumo:	**18 W**
Importador:	**Philips Mexicana, S.A. de C.V.**
Domicilio:	**Av. La palma No. 6**
	Col. San Fernando la Herradura, Huixquilucan
Localidad y Telefono:	**Edo. de México C.P. 52784**
	Tel. 52 69 90 00
Exportador:	**Philips Electronics Hong Kong Ltd.**
País de Origen:	**China**
Nº de Serie:	_____

LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR SU APARATO.

Downloaded From Disc-Player.com Philips Manuals

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

– Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).

– Cuando el aparato no haya sido operarado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.

– Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).

Downloaded From Disc-Player.com Philips Manuals

English FUNCTIONAL OVERVIEW

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Main unit controls (see figure 1)

① **OPEN** .....Open the disc door to insert or remove disc.

② **OK** .....Confirm a selection.

③ ▲, ▼, ◀, ▶ .....Navigate in a menu.

.....(◀ / ▶) search backward/forward in a disc at different speeds.

④ **AV OUT/DVD** .....Switch between DVD and AV OUT modes.

⑤ **MENU**.....Enter or exit the disc contents menu.

⑥ ⏮ / ⏭ .....Skip to the previous/next chapter, track or title.

⑦ ▶II .....Start or interrupt playback.

⑧ ■ .....Stop playback or erase a program.

⑨ **IR**.....Remote sensor.

⑩ **POWER and CHG**..Power and charge indicator.

Left of player (see figure 1)

⑪ DC IN 9V .....Power supply socket.

⑫ **AV OUT**... .....Audio/Video output jack.

⑬ VOLUME .....Volume control.

⑭ 1 2 .....Headphone jacks.

⑮ **ON/OFF**.....Switch the power on/off.

Downloaded From Disc-Player.com Philips Manuals

FUNCTIONAL OVERVIEW

Remote controls (see figure 2)

① **SETUP** .....Enter or exit the system menu.
② **DVD MENU**.....Enter or exit the disc contents menu.
③ ▲, ▼, ◄, ► .....Navigate in a menu.
.....(◄ / ►) search backward/forward in a disc at different speeds.
④ **OK** .....Confirm a selection.
⑤ **PROGRAM** .....Enter the program menu.
⑥ **DISPLAY**.....Display information on TFT during playback.
⑦ **PREV/NEXT** ⏮ / ⏭.....Skip to the previous/next chapter, track or title.
⑧ **PLAY/PAUSE ►II**.....Start or interrupt playback.
⑨ **STOP ■**.....Stop playback or erase a program.
⑩ **TITLE**.....Display the disc title
⑪ **Numeric Keypad (0-9)** ..Input numbers.
⑫ **REPEAT** .....Repeat a chapter/track/title.
⑬ **A-B**.....Repeat playback of a specific section on a disc.
⑭ **ZOOM** .....Enlarge or reduce a picture or active image on the TFT.
⑮ **SUBTITLE**.....Select a subtitle language.
⑯ **AUDIO** .....Select an audio language when playing a DVD disc or select an audio mode (Stereo, Mono-Left or Mono-Right) when playing a VCD/CD disc.

CAUTION
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Downloaded From Disc-Player.com Philips Manuals

INTRODUCTION

Your portable DVD player

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up).

The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included.

What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

Unpacking

- Portable DVD player
- Car adaptor (12V)
- User Manual
- Quick Start Guide
- AC power adaptor, DSA-20R-12F (DVE)
- Remote Control
- Audio / Video cable
- Warranty
- PAC132 second LCD screen

Placement

- Place the player on a firm, flat surface.
- Keep away from domestic heating equipment and direct sunlight.
- If the player cannot read CDs/DVDs correctly, try using a commonly available cleaning CD/DVD to clean the lens before taking the player to be repaired. Other cleaning methods may destroy the lens.
- Always keep the disc door closed to avoid dust on the lens.
- The lens may cloud over when the player is suddenly moved from cold to warm surroundings. It is then not possible to play a CD/DVD. Leave the player in a warm environment until the moisture evaporates.

Downloaded From Disc-Player.com Philips Manuals

INTRODUCTION

About Built-in Rechargeable Battery

Precautions related to battery recharge

1 Once the battery is fully discharged, immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life. When the power is low, the battery icon will be shown on the upper-left corner of the TFT for warning.

2 To charge the battery, please directly connect this DVD player to AC mains and the charge indicator will turn on.

Using and maintaining your rechargeable batteries

1 Please make sure you always use only the AC adapter included with the player to recharge your batteries.

2 Recharge efficiency will degrade when the environmental temperature drops below 50°F (10°C) or exceed 95°F (35°C).

3 The lasting time of the fully charged battery when a headphone is connected to the DVD player is approximately 2 hours.

Playable disc formats

In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CDR, CDRW,DVD±R and DVD±RW).

DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.

CD with JPEG files

You can also view JPEG still photos on this player.

Downloaded From Disc-Player.com Philips Manuals

INTRODUCTION

Video CD

Depending on the material on the disc (a movie, video clips, a drama series, etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case.To make access easy and convenient, your player lets you move between tracks and between indexes.

Audio CD / MP3 CD

Audio CDs / MP3-CD contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).

Downloaded From Disc-Player.com Philips Manuals

GENERAL INFORMATION

Power Sources

This unit operates on a supplied AC adapter, car adapter, or the built-in Ni-MH battery.

- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Unplug the AC adaptor from the outlet when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes. Any service should be done by qualified service personnel.
- Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.
- Important (for models with by-packed headphones): Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips.
- Traffic safety: do not use while driving or cycling as you may cause an accident
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submersed in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- The apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects,lighted candles)
- Do not touch the lens!
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

Downloaded From Disc-Player.com Philips Manuals

GENERAL INFORMATION

Hearing Safety

Listen at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones:

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Downloaded From Disc-Player.com Philips Manuals

GENERAL INFORMATION

Handling discs

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth.

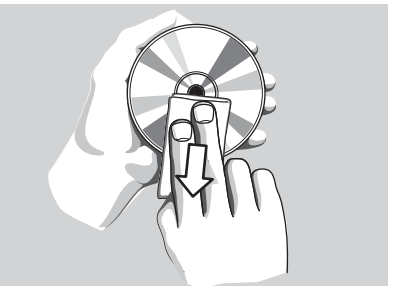

On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points(red,blue,green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET.
Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

All other brand and product names are trademarks of their respective companies or organizations.
Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.

Downloaded From Disc-Player.com Philips Manuals

PREPARATIONS

Power supply

Using the AC / DC adaptor

Connect the supplied adapter to the set and the main power supply (as shown).

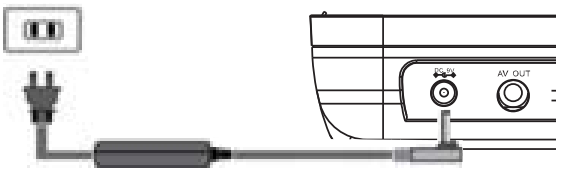

TIP

To avoid damage to the player, switch off before plugging or unplugging the AC adaptor.

Using the car adapter

Connect the supplied car adapter to the set and the car cigarette lighter outlet.

TIP

- To avoid damage to the player, switch off before plugging or unplugging the car adaptor.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Make sure the temperature is below 35^{O}C when the DVD player is connected to DC 16.0V in a car.

Powering your remote control

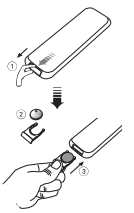

1 Open the battery compartment. Remove the protective plastic tab (first time users only).

2 Insert 1 x lithium 3V battery, type CR2025, then close the compartment.

CAUTION

- Batteries contain chemical substances, so they should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.

Downloaded From Disc-Player.com Philips Manuals

PREPARATIONS

Connections

Connecting headphones

Connect the headphones into the 1 or the 2 jack of your set.

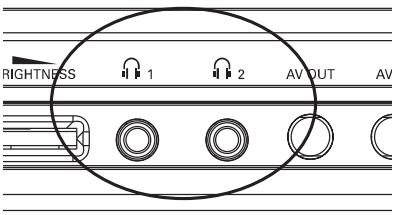

Connecting additional equipment

- Turn off your set before connecting to any additional equipment.
- You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke.

AV OUT

Connect the desired device to this terminal directly.

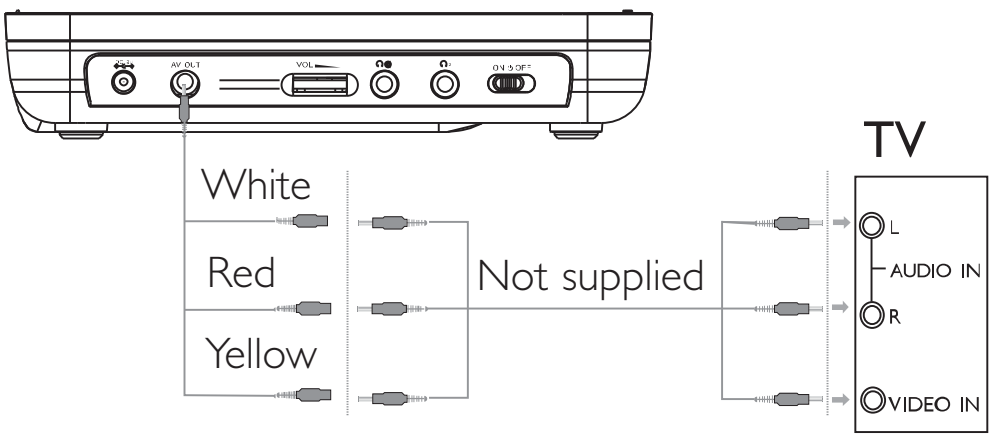

Connection	Video	Audio (Left)	Audio (right)
Color	Yellow	White	Red

Downloaded From Disc-Player.com Philips Manuals

GENERAL EXPLANATION

About this manual

This manual gives the basic instructions for operating this DVD player. Some DVD discs however are produced in a way that requires specific operation or allows only limited operation during playback. In these cases the player may not respond to all operating commands. When this occurs, please refer to the instructions in the disc inlay. When a " ⊘ " appears on the screen, the operation is not permitted by the player or the disc.

Remote control operation

- Unless otherwise stated, all operations can be carried out with the remote control. Always point the remote control directly at the player, making sure there are no obstructions in the path of the infrared beam.
- When there are corresponding keys on the main unit, they can also be used.

Menu navigation

- Your player has an intuitive menu navigation system to guide you through various settings and operations.
- Use the function keys to activate / disable relevant operations.
- Use ▲, ▼, ◀, ▶ to browse through menus.
- Press **OK** key to confirm your selection.

Downloaded From Disc-Player.com Philips Manuals

BASIC FUNCTIONS

Switching on for OSD language setup

English is the default language of your player's on screen display. You may choose to use Spanish, Portuguese or English for your player's on screen display.

Region	OSD Language Options
Latin America	Spanish, Portuguese, English

1 Slide the **POWER** switch to **ON** to switch on the player.

2 Press **SETUP** for the setup menu.

3 Select **General Setup Page** and press **OK**.

4 Scroll and select **OSD Language** and press ▶ to select from OSD language options.

5 Select your preferred language and press **OK**.

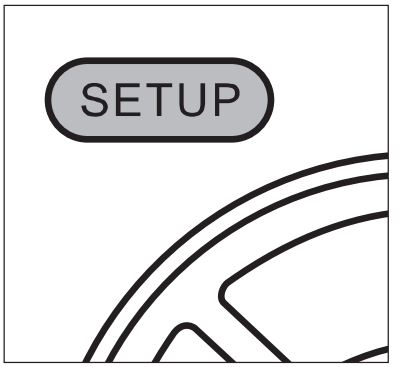

Loading discs and switching on

1 Press **OPEN** to open the disc door.

2 Insert your chosen disc, label side up (also when a double sided DVD disc is inserted). Make sure it is sitting properly in the correct recess.

3 Gently push to close the door.

4 Slide the **POWER** switch to **ON** to switch on the player.

✔ TIP

A normal mechanical noise is heard during playback.

Downloaded From Disc-Player.com Philips Manuals

BASIC FUNCTIONS

Playing a DVD disc

After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the ▲, ▼, ◀, ▶ keys to highlight your selection,and press **OK**.

Note: Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

Playing an audio or video CD disc

- After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded as well as information about the disc's contents.
- While playing VCD with MTV/Karaoke, press number keys(0-9) to select the track and press ▶II or **OK** to play the track.

Downloaded From Disc-Player.com Philips Manuals

BASIC FUNCTIONS

Playing an MP3 CD

The following playback features are available for MP3 CDs.
Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the ▲, ▼ keys to highlight your selected music folder.
Press **OK** to play.

Playing a JPEG discs

Use the ▲, ▼, ◀, ▶ keys to highlight your selected picture folder.
Press **OK.** The player will then automatically enter the slide show mode.

During playback, you can:

- Use the ◀, ▶ to rotate the picture.
- Use the ▲ to flip up/down.
- Use the ▼ to flip left/right.

- Press **DVD MENU** to go back to folder screen.

- Press ■ to go to group preview.
- Use the ▲, ▼, ◀, ▶ to highlight the preview picture and access the on-screen functions.

- Press **ZOOM** repeatedly to display the picture with different scales.
- Use the ▲, ▼, ◀, ▶ to view the zoomed picture (for picture zoomed in only).

Note: Unless stated otherwise, all operations described are based on remote control operation.

Downloaded From Disc-Player.com Philips Manuals

GENERAL FEATURESS

Moving to another title / track / chapter

When a disc has more than one title or track, you can move to another title/track/chapter as follows:

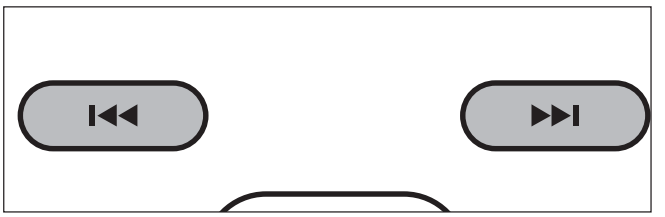

- Press ⏭ briefly during play to select the next title/ track / chapter.
- Press ⏮ briefly during play to step back to the previous title/track/chapter.
- To go directly to any title, track or chapter, enter the corresponding number using the numerical keys (0-9).

Search

During playback, press ▶ repeatedly for the following forward search options:
Press ◀ repeatedly for the following backward search options:

◀	▶
2 X backwards	2 X forward
4 X backwards	4 X forward
8 X backwards	8 X forward
16 X backwards	16 X forward
32 X backwards	32 X forward
normal speed	normal speed

Press **OK** or **▶II** to resume normal playback.

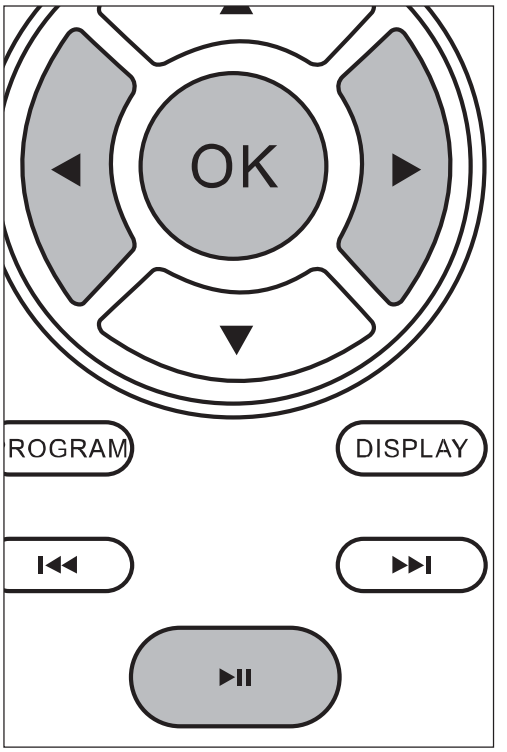

Downloaded From Disc-Player.com Philips Manuals

GENERAL FEATURES

Changing the audio output (for VCD/CD)

Press **AUDIO** repeatedly for the following audio options.

x 1	Mono left	x 2	Mono right
x 3	Stereo		

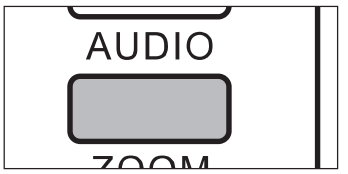

TIP

This key is used to select audio languages during DVD playback.

ZOOM

The Zoom function allows you to enlarge the video image and to pan through the enlarged image. Press **ZOOM** repeatedly to select the following zooming options.

Zoom x 1	2X	Zoom x 2	3X
Zoom x 3	4X	Zoom x 4	normal

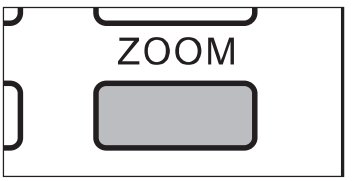

TIP

During JPEG operation, the sequence is 100%, 125%, 150%, 200%, 50%, 75% and normal.

REPEAT

Press **REPEAT** repeatedly for the following repeat options:

	DVD actions	MP3 actions	CD actions	JPEG actions
x 1	repeats chapter	repeats one	repeats track	repeats one
x 2	repeats title	repeats folder	repeats all	repeats all
x 3	repeats all	cancels repeat	cancels repeat	cancels repeat
x 4	cancels repeat			

Downloaded From Disc-Player.com Philips Manuals

TIP

The repeat function is also available for JPEG etc. The actions may vary for different media being played.

Repeat A - B

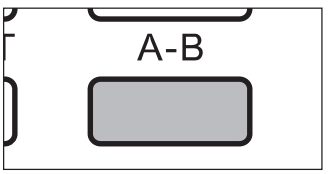

To repeat or loop a sequence in a title:

- Press **A - B** at your chosen starting point;

  ⮌ **A** appears on the screen.

- Press **A - B** again at your chosen end point;

  ⮌ **AB** appears on the display, and the repeat sequence begins.

- To exit the sequence, press **A - B**.

Volume Control

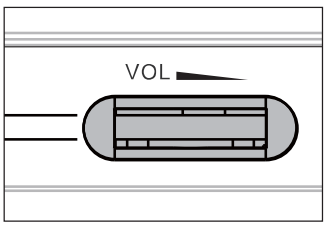

- Use the rotary switch on the left side of the unit to increase or decrease playback volume.

Downloaded From Disc-Player.com Philips Manuals

GENERAL FEATURES

DISPLAY

Press **DISPLAY** on the remote repeatedly for the following display options:

	DVD	CD/VCD
x 1	Title elapsed	Single elapsed
x 2	Title remained	Single remained
x 3	Chapter elapsed	Total elapsed
x 4	Chapter remained	Total remained
X5	Display off	Display off

TIP

During JPEG operation, pressing this button enables you to select 17 slideshow modes.

PROGRAM

1. During playback, press **PROGRAM** on the remote to enter a program menu.
2. Use the **numerical keys 0-9** to directly input the tracks or chapters (single track number with digit "0" in front, for example "05").
3. Move the cursor by pressing ◄ ► to select START and then press **OK** to start program playback.

Downloaded From Disc-Player.com Philips Manuals

SPECIAL DVD FEATURES

Checking the contents of DVD-Video discs: **DVD MENU**.

For titles and chapters, selection menus may be included on the disc.
The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key; or use the ▲, ▼, ◀, ▶ keys to highlight your selection, and press **OK**.

Disc menu

Press **DVD MENU**. The menu may list, for example, camera angles, spoken language and subtitle options, and chapters for the title.

Changing the language

Press **AUDIO**. If the current disc has different language options, this now appears on the screen.

Press **AUDIO** repeatedly until you have reached your desired language option.

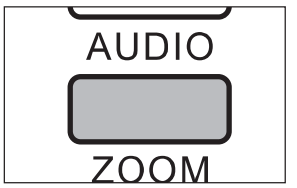

Subtitle

Press **SUBTITLE**. If the current disc has different subtitles options, this now appears on the screen.

Press **SUBTITLE** repeatedly until you have reached your desired subtitles option.

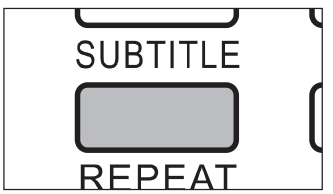

TIP

The above two features depend on whether your disc contains any language or subtitle options.

Downloaded From Disc-Player.com Philips Manuals

SPECIAL DVD FEATURES

Playing a title

1 Press **DVD MENU** to enter the disc title menu.

2 Use ◄ ► ▲ ▼ or **numeric keys (0-9)** to select a play option.

3 Press **OK** to confirm.

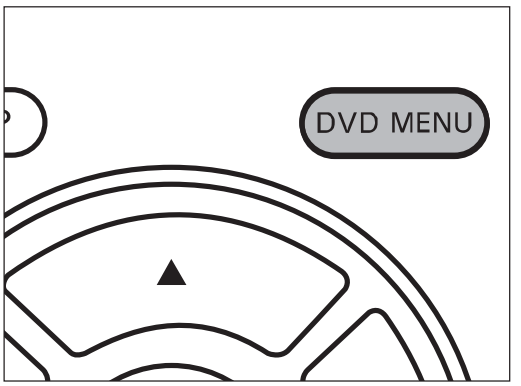

Downloaded From Disc-Player.com Philips Manuals

SETUP OPERATIONS

To maximize your playback experience, use **SETUP** to fine tune your settings. Use the ▲,▼,◀, ▶ keys to highlight your selection, and press **OK**.

1 Press **SETUP**. A list of features is shown.
2 Use the ▲ ▼ keys to highlight your selection.

When the cursor highlights these settings, press **OK** to:

General Setup Page	select display and other options
Video Setup Page	select video options
Password Setup Page	select password options
Preference Page	select playback preferences

3 Press ◀ to abort current settings or go back to previous menu level.
4 Press **SETUP** to exit.

General Setup Page

When the cursor highlights these settings, press **OK** to:

Angle Mark	select angle mark display options
OSD Language	select onscreen display language
Screen Saver	select screen saver options
Last Memory	select last playback memory options

Press ◀ to abort current settings or go back to previous menu level.

Note: Before using the ▲,▼ keys to select your desired angle mark, ensure the disc has been recorded with angle mark and you have enabled the angle mark option in the system menu.

Downloaded From Disc-Player.com Philips Manuals

SETUP OPERATIONS

Video Setup Page

When the cursor highlights these settings, press **OK** to:

Brightness	select brightness level
Contrast	select contrast level

Press ◀ to abort current settings or go back to previous menu level

Password Setup Page

When the cursor highlights these settings, press **OK** to:

Password	change existing password (3308 by default)

Press ◀ to abort current settings or go back to previous menu level

Note: Parental options are only selectable when password mode is deactivated.

Preference Page

When the cursor highlights these settings, press **OK** to:

Audio	select audio language options
Subtitle	select subtitle language options
Disc Menu	select disc menu language options
Parental	select parental options
Default	restore factory settings

Press ◀ to abort current settings or go back to previous menu level.

Downloaded From Disc-Player.com Philips Manuals

PAC132 SECONDARY LCD SCREEN

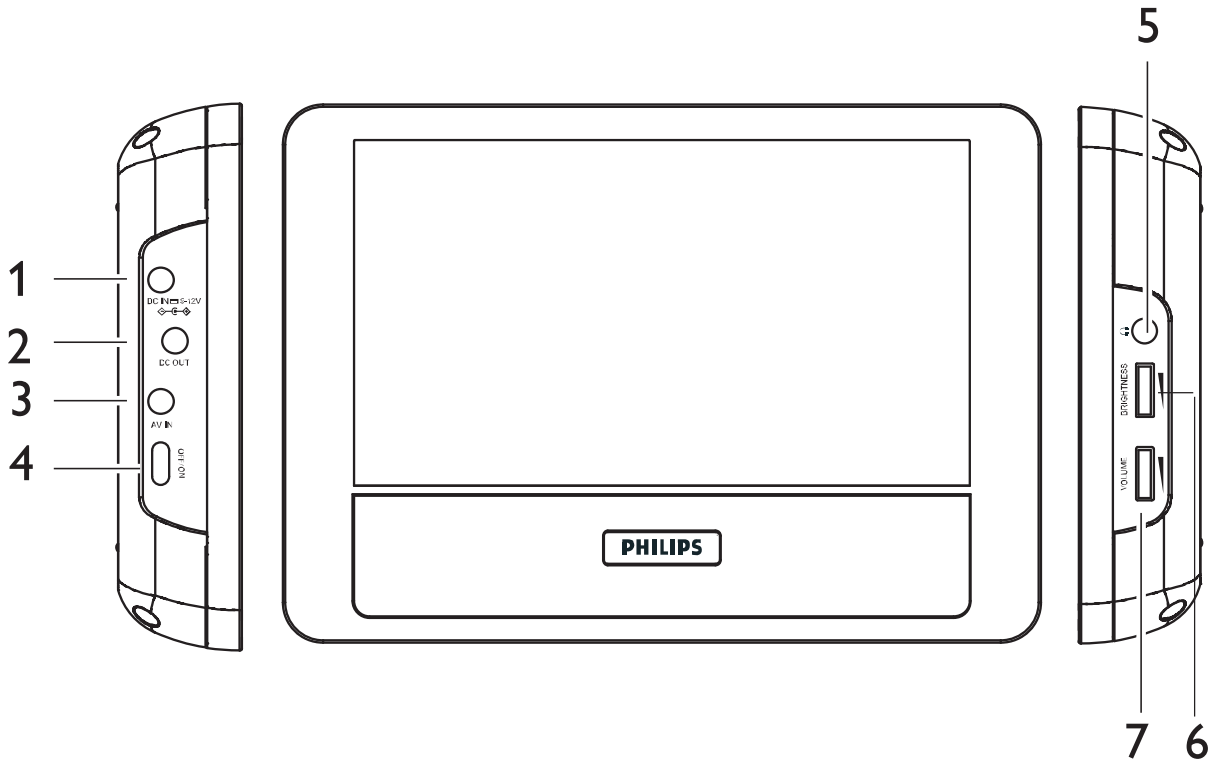

Left side of the player

① **DC IN** .....DC power input jack

② **DC OUT** .....DC power output jack

③ **AV IN** .....Audio/Video input

④ **ON/OFF**.....Switch the player on / off

Right side of the player

⑤ **Headphone jack**

⑥ **Brightness** .....Finetune the TFT screen brightness

⑦ **VOLUME** .....Volume control

Downloaded From Disc-Player.com Philips Manuals

PAC132 SECONDARY LCD SCREEN

Connection

Make sure that the primary DVD player, secondary LCD screen and any other electrical equipment are switched off before connection.

Use in a car

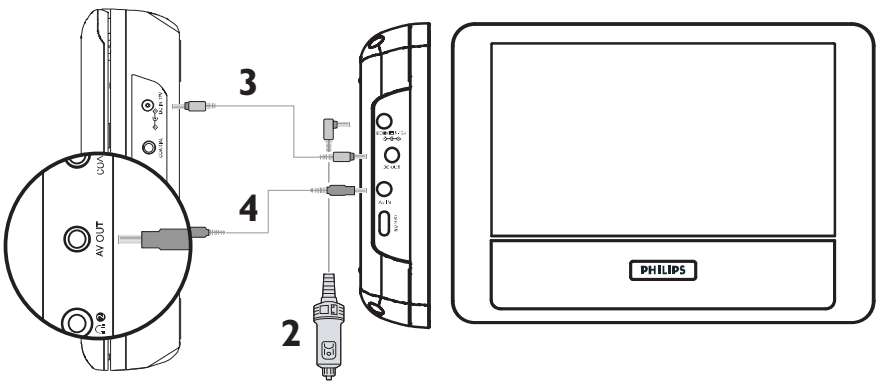

Primary DVD player PAC132

1 Mount the devices to the headrest with the mounting kits.
2 Connect the power plug of the car adaptor to PAC132.
3 Connect the power source to the primary DVD player using the power cord.
4 Connect the audio/visual cable to the devices.

Downloaded From Disc-Player.com Philips Manuals

PAC132 SECONDARY LCD SCREEN

Use at home

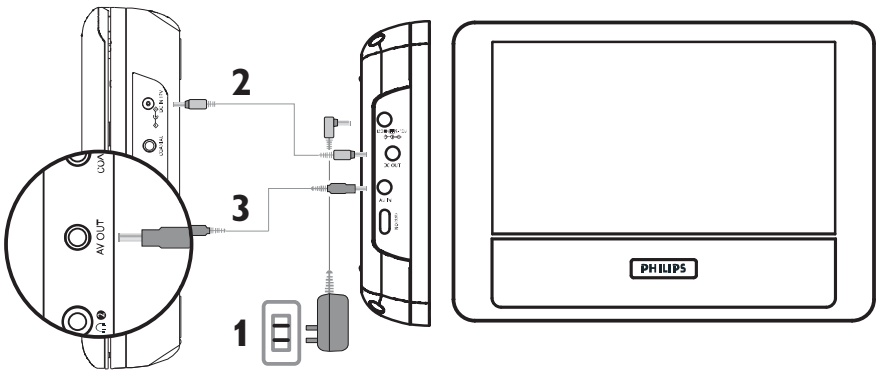

Primary DVD player PAC132

1 Connect the AC/DC power adaptor to PAC132.

2 Connect the power source to the primary DVD player using the power cord.

3 Connect the audio/visual cable to the devices.

Connect to headphone

Connect the headphones to the right side of the player for private listening.

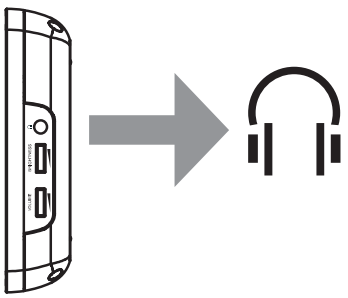

Downloaded From Disc-Player.com Philips Manuals

PAC132 SECONDARY LCD SCREEN

Connect to camcorder

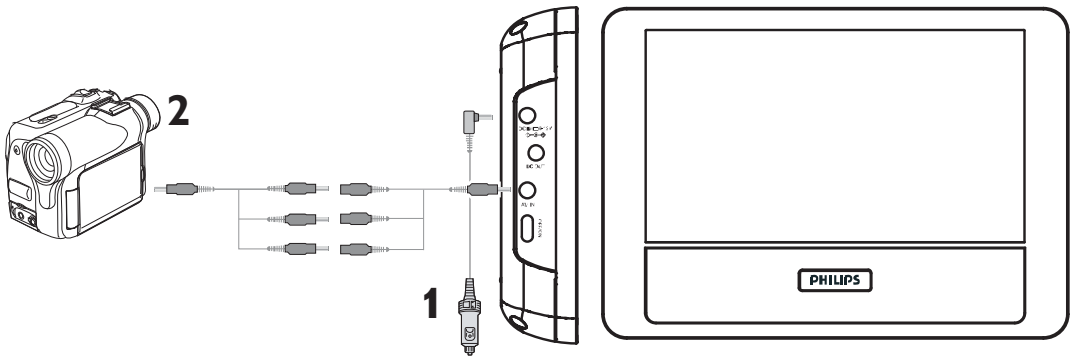

You can connect the player to your camcorder to view video on a bigger screen.

1 Connect PAC132 to the power source.

2 Connect the camcorder to PAC132 using the audio/video cable

You can adjust the volume and the brightness of the display screen during video playback.

Enjoyment

Power on

1 Power on the connected device, such as the primary DVD player, camcorder etc.

2 Power on PAC132

3 PAC132 will automatically playback the video content

4 Power off all the devices after viewing

Volume control

Adjust the volume control on the right side of the player.

Screen brightness

Use the rotary switch on the right side of the unit to finetune the TFT screen brightness.

Downloaded From Disc-Player.com Philips Manuals

PAC132 SECONDARY LCD SCREEN

Technical data

TFT screen size	7 inches
Weight	0.37 kg / 0.81 lb
Power supply	DC 9-12V, 2A
Power Consumption	≤ 20W
Operating temperature range	0 - 50°C (32 - 122°F)
Video system	NTSC / PAL / AUTO

Downloaded From Disc-Player.com Philips Manuals

TROUBLESHOOTING

If it appears that the DVD-Video player is faulty, first consult this checklist.
It may be that something has been overlooked.

WARNING

Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee.

If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom	Remedy
No power	– Check if both plugs of the mains cord are properly connected. – Check if there is power at the AC outlet by plugging in another appliance. – Check if the built-in battery is drained. – Check if car adaptor is connected appropriately.
Distorted picture	– Check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge. – Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture / no colour in the TV screen	– The PAL/NTSC setting may be in the wrong status. Match your TV's setting with the player's setting.
No sound	– Check audio connections. If using a HiFi amplifier, try another sound source.
Disc can't be played	– Ensure the disc label is upwards. – Clean the disc. – Check if the disc is defective by trying another disc.

Downloaded From Disc-Player.com Philips Manuals

TROUBLESHOOTING

Symptom	Remedy
The player does not respond to the remote control	– Aim the remote control directly at the sensor on the front of the player. Avoid all obstacles that may interfere with the signal path. Inspect or replace the batteries.
Distorted or B/W picture with DVD	– Use only discs formatted according to the TV-set used (PAL/NTSC).
Player does not respond to all operating commands during playback	– Operations are not permitted by the disc. – Refer to the instructions in the disc inlay.
Player feels warm	– When the player is in use for a long period of time, the surface will be heated. This is normal.
Display goes dimmer when AC is unplugged	– The unit is saving power to ensure longer playtime with battery. It is normal. Adjust the brightness using the rotary brightness control.
No sound (PAC132)	– Make sure that the LCD screen is switched on and is in the correct video mode. – Make sure that your system connection is properly connected. – Make sure the video source is correct.
No video (PAC132)	– Make sure all the connected devices are switched on. – Make sure that the system is properly connected. – Make sure that video playback has already started on the primary device, such as DVD player, camcorder. – Make sure that the video out function on the primary device has been activated.

Downloaded From Disc-Player.com Philips Manuals

TECHNICAL DATA

Dimensions	203 x 40.4 x 149 mm
Weight	0.71 kg
Power supply	DC 9V 2.0A
Power Consumption	18W
Operating temperature range	0 - 45°C
Laser wavelength	650nm
Video system	PAL/NTSC
Frequency response	20Hz ~ 20KHz ± 1dB
Signal/noise ratio	≥ 80dB
Audio distortion + noise	≤ -80(1KHz)
Channel separation	≥ 80dB
Dynamic range	≥ 80dB
Output	
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance:	10KΩ
Video out Output level:	1Vp - p ± 20%
Load impedance:	75Ω

PHILIPS reserves the right to make design and specification changes for product improvement without prior notice.

Modifications not authorized by the manufacturer may void users authority to operate this device.

All rights reserved.

Downloaded From Disc-Player.com Philips Manuals

CERTIFICADO DE GARANTÍA INTERNACIONAL **PHILIPS**

Validez de la garantía

Todos los productos de la línea de audio y video Philips, se regirán por un año de garantía internacional (365 días), salvo para Chile donde los productos de las líneas CD Portable y RCR CD, los cuales se rigen por 6 meses de garantía (182 días)

Condiciones de la garantía

Esta garantía perderá su validez sí:

- El defecto es causado por uso incorrecto o en desacuerdo con el manual de instrucciones
- El aparato sea modificado, violado por una persona no autorizada por Philips
- El producto esté funcionando con un suministro de energía (red eléctrica, bateria, etc.) de características diferentes a las recomendadas en el manual de instrucciones
- El número de serie que identifica el producto se encuentre de forma adulterada.

Están excluidos de garantía,

- Los defectos que se generen debido al incumplimiento del manual de instrucciones del producto
- Los casos fortuitos o de la fuerza mayor, como aquellos causados por agentes de la naturaleza y accidentes, descargas eléctricas, señales de transmisión débiles.
- Los defectos que se generen debido al uso de los productos en servicios no doméstico/residencial regulares o en desacuerdo con el uso recomendado
- Daños ocasionados por fluctuaciones de voltajes, voltaje fuera de norma o por causas fuera de Philips, como cortocircuitos en los bafles o parlantes.
- En las ciudades en donde no existe el taller autorizado del servicio de Philips, los costos del transporte del aparato y/o el técnico autorizado, corren por cuenta del cliente.
- La garantía no será válida si el producto necesita modificaciones o adaptaciones para que funcione en otro país que no es aquél para el cual fue mercadeado.

El único documento válido para hacer efectiva la garantía de los productos, es la Factura o Boleta de compra del consumidor final.

Aquellos productos que hayan sido adquiridos en otros países y que no estén en el rango normal del país donde se efectuará la reparación, dicha prestación de servicio tomará mas tiempo de lo normal ya que es necesario pedir las partes/piezas al centro de producción correspondiente.

Centros de información

Líneas de atención al consumidor
Chile: 600-7445477
Colombia: 01-800-700-7445
Costa Rica: 0800-506-7445
Ecuador: 1-800-10-1045
El Salvador: 800-6024
Guatemala: 1-800-299-0007
Panama: 800-8300
Peru: 0800-00100
Rep. Dominicana: 1-800-751-2673
Venezuela: 0800-100-4888

POLIZA DE GARANTIA PARA MEXICO

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**
Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.
Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.
PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles,** contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.
La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.
Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:
-Cuando el aparato sea utilizado en condiciones distintas a las normales.
-Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.
-Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES.- Monitores para computadora.
12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, video proyectores (excepto la lámpara) , cámaras de video, radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, reproductores de audio digital MP3 (Internet), decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisitemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, equipos modulares, sintoamplificadores, facsimils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.
6 MESES.- radio relojes, radios A.M./F.M., auto estéreos, teléfonos inalámbricos, cámaras digitales.
3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, audífonos.

PHILIPS

Downloaded From Disc-Player.com Philips Manuals

MC – 719 - ARCO

Certificado de Garantía en Argentina

Artefacto: **Modelo:**
Fabricante/Importador: Philips Argentina S.A.
y/o Fábrica Austral de Productos Eléctricos S.A.
Dirección: Vedia 3892 - Buenos Aires
Fecha de Venta:

	Nro. de serie

Firma y sello de la casa vendedora.

PHILIPS ARGENTINA S.A. en adelante denominada "la empresa", garantiza al comprador de este artefacto por el término de (1) año a partir de la fecha de adquisición, el normal funcionamiento contra cualquier defecto de fabricación y/o vicio de material, y se compromete a reparar el mismo —sin cargo alguno para el adquirente— cuando el mismo fallare en situaciones normales de uso y bajo las condiciones que a continuación se detallan:

1. Este certificado de garantía es válido únicamente en la Republica Argentina. El certificado debe ser completado por la casa vendedora y ser presentado por el usuario conjuntamente con la factura original de compra.
2. Serán causas de anulación de esta garantía en los casos que corresponda:
   2.1. Uso impropio o distinto del uso doméstico.
   2.2. Exceso o caídas de tensión eléctrica que impliquen uso en condiciones anormales.
   2.3. Instalación y/o uso en condiciones distintas a las marcadas en el "Manual de instalación y uso" que se adjunta a esta garantía.
   2.4. Cualquier intervención al artefacto por terceros no autorizados por la empresa.
3. La garantía carecerá de validez si se observare lo siguiente:
   3.1. Enmiendas o raspaduras en los datos del certificado de garantía o factura.
   3.2. Falta de factura original de compra que detalle tipo de artefacto, modelo, número de serie y fecha que coincida con los del encabezamiento del presente certificado.
4. No están cubiertos por esta garantía los siguientes casos:
   4.1. Los daños ocasionados al exterior del gabinete.
   4.2. Las roturas, golpes, caídas o mayaduras causadas por traslados.
   4.3. Los daños o fallas ocasionados por deficiencias, sobretensiones, descargas o interrupciones del circuito de alimentación eléctrica o rayos, deficiencias en la instalación eléctrica del domicilio del usuario o conexión del artefacto a redes que no sean las especificadas en el Manual de Uso del mismo.
   4.4. Las fallas, daños, roturas o desgastes producidos por el maltrato o uso indebido del artefacto y/o causadas por inundaciones, incendios, terremotos, tormentas eléctricas, golpes o accidentes de cualquier naturaleza.
   4.5. Las fallas o daños ocasionados en desperfectos en la línea telefónica.
   4.6. Las fallas producidas por una mala recepción ocasionada en el uso de una antena deficiente o en señales de transmisión débiles.
5. Las condiciones de instalación y uso del artefacto se encuentran detalladas en el Manual de Uso del mismo.
6. La empresa no asume responsabilidad alguna por los daños personales o a la propiedad al usuario o a terceros que pudieran causar la mala instalación o uso indebido del artefacto, incluyendo en este último caso a la falta de mantenimiento.
7. En caso de falla, el usuario deberá requerir la reparación a la empresa a través del Service Oficial y/o Talleres Autorizados más próximos a su domicilio y cuyo listado se acompaña al presente. La empresa a segura al usuario la reparación y/o reposición de piezas para su correcto funcionamiento en un plazo no mayor a 30 días contados a partir de la fecha de solicitud de reparación, salvo caso fortuito o fuerza mayor.
8. Toda intervención del servicio técnico realizada a pedido del usuario dentro del plazo de garantía, que no fuera originada por falla o defecto alguno cubierto por este certificado, deberá ser abonado por el interesado de acuerdo a la tarifa vigente.
9. El presente certificado anula cualquier otra garantía implícita o explícita, por la cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad con respecto a nuestros productos.
10. En caso de que durante el período de vigencia de esta garantía el artefacto deba ser trasladado a las Delegaciones Oficiales y/o Talleres Autorizados de Service para su reparación, el transporte será realizado por la empresa y serán a su cargo los gastos de flete y seguros y cualquier otro que deba realizarse para su ejecución.

PHILIPS

Red de Talleres Autorizados en Argentina

CAPITAL FEDERAL

ATTENDANCE S.A.
- Av. Monroe 3351 (C1430BKA) Cap. Fed.
- Tel.: 4545-5574/0704 ó 6775-1300
- Ventas de Repuestos y Accesorios
- Tel.: 4545-0854

DIG TRONIC
- Av. San Martín 1762 (C1416CRS) Cap. Fed.
- Tel.: 4583-1501

ELECTARG S.R.L.
- Av. Córdoba 1357 (C1055AAD) Cap. Fed.
- Ventas de Repuestos y Accesorios
- Tel.: 4811-1050

Caballito	Elisarg	J. M. Moreno 287	4903-0307/0854/4983

BUENOS AIRES

Azul	Hurkin Raul Horacio	Av. 25 de Mayo 1227	(02281) 426719
Bahia Blanca	Neptron	Soler 525	(0291) 4525379
Bragado	Yanovich Juan J.	San Martin 2141	(02342) 424147
Campana	Electricidad Roldan	Lavalle 415	(03489) 432013
Chivilcoy	Fama	Coronel Suarez 119	(02346) 424129
Junin	Junin Service	Alsina 537	(03362) 442784
La Plata	Hijos de Hijos	Calle 66 Nº 1522	(0221) 4516021
La Plata	Service Tecnico La Plata	Av. 51 Nº 1051 esq. 16	(0221) 4538455
Mar de Ajó	Norte Electronica	Catamarca 14	(02257) 421750
Mar del Plata	Central Service	Olavarria 2216	(0223) 4721094/4729307
Mar del Plata	Service Industrial	Diag. Pueyrredon 3229	(0223) 4545633
Necochea	Electronica Camejo	Calle 58 Nº 1145	(02262) 426134
Pehuajo	Galeano Carlos Alberto	Zulema 784	(02396) 472605
Pergamino	ACV Sistemas	Int. Ayerra 538	(02477) 421117
Pergamino	El Service	Juan B. Justo 1981	(02477) 418800
San Nicolás	Servitec	Gv. Alvarez 146	(02461) 4547/23/425576
San Pedro	Electronica Monteiro	Mitre 1095	(03329) 425523
Tandil	Lazzarini Oscar Isidro	Chacabuco 524	(02293) 443167
Tremque Lauquen	Laforeu Electronica	Av. San Martin 428	(02392) 423246
Tres Arroyos	Saint Fabian y Sergio	Av. Belgrano 0752	(02983) 427969
Zarate	Electronica Spinardi	Rivadavia 1030	(03487) 437353

GRAN BUENOS AIRES

Avellaneda	Casa Torres S.A.	Av. Mitre 2539	4205-5034
Florencio Varela	Casa Torres S.A.	San Martin 2571	4255-5034
Gregoria de Laferrere	Electronica Alvarez	Honorio Leque 6084	4626-1222
Lomas de Zamora	Alterdance S.A. Lomas	Laprida 485	4202-9000
Merlo	Argentronica S.A.	Pte. Campora 2170	(020) 483/7/7/4829844
Moreno	Argentronica S.H.	Hnos. Mitre 756 / 760	(0237) 4629660
Morón	Servotronic	Nva. Su. del Buen Viaje 1222	4627-5035
Olivos	Appliance	Av. Libertador 2684	4794-4769
Quilmes	Casa Torres S.A.	E. Rios esq. Gran Canaria	4255-5034
Ramos Mejia	Electarg S.R.L. Suc.	Belgrano 224	4656-5019
San Miguel	Servotronic San Miguel	Belgrano 899	4664-4121
Villa Ballester	Servotronic	J. Hernandez 3101	4767-2815/4768-5240

CATAMARCA

Catamarca	Unidenor Central de Serv.	San Martin 825	(03833) 427235

CHACO

Resistencia	Piccolli Jorge Oscar	Av. Alvear 320	(03722) 429030

CHUBUT

Comodoro Rivadavia	C.A.S. S.R.L.	Alem 165	(0297) 4442629
Trelew	Ingeman Electronica	Irazusta 251	(02965) 427/0/5

CORDOBA

Cordoba Capital	Servotron S.R.L.	Pje. E. Marcello 685 (0351) 4724000/4730324	
Rio Cuarto	Mercatto Victor G.	Bv. Almafuerte 497	(0358) 4660604
Rio Cuarto	Capdevi Abel	Navarro 629	(0358) 4692002
Rio Tercero	Servitec Omega	Hermano Maruz 140	(03571) 423330
San Francisco	Arana Walter Electronica	9 de Julio 360	(03564) 420367
Villa Maria	Lozada Electronica	Gv. Alvear 545	(0353) 4521366
Villa Maria	Vanguard Sist. Electronicos	Libaron 421	(0353) 4532951

Philips Mexicana, S.A. de C.V.

Producto Importado por:
Philips Mexicana, S.A. de C.V.
Av. La Palma No.6
Col. San Fernando La Herradura
Huixquilucan, Edo. de México, C.P. 52/84
Tel. 52 69 90 00

Centro de Informacion al Cliente
Información General
LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
CORREO ELECTRONICO
philips@merkafon.com

MODELO_____ No. DE SERIE_____

La presente garantía contará a partir de: DIA_____ MES_____ ANO_____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro **Centro de información al Cliente**, en donde con gusto le atenderemos en todo lo relativo a:
* Servicio de sus aparatos Philips
* Información de productos y Talleres Autorizados Philips
* Asesoría on el manejo o instalación de su producto Philips
* Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-0245	vespro@prodigy.net.mx	S	MEXICO, D.F. ZONA NORTE	55	55-67-19-62 55-67-32-66	chyl_electronics@yahoo.com.mx	S
ACUAMANALA (ENTRE AEM	449	17-20-24	jimsalas@hotmail.com	S	MEXICO, D.F. ZONA CENTRO	55	10-42-64-77	mtrgeneral@terra.com.mx	S
CAMPECHE, CAMP.	981	816-25-15	unisa@hotmail.com	S	MEXICO, D.F. ZONA PONIENTE	55	55-12-44-12	raul-sanz@prodigy.net.mx	S
CANCUN, Q ROO.	998	884-10-74	gammacancun@unete.net.mx	S	MONTERREY, N.L.	818	375 - 8-17 40-04-53	mussa@prodigy.net.mx	S
CD. JUAREZ, CHIH	656	619-21-08 629-43-20	td.servicio@prodigy.net.mx	S	MORELIA, MICH	443	312-09-17	m.illaservices_y@hotmail.de_zamora@mexico.com	S
CD. OBREGON, SON	644	410-81-21 410-82-01	mena16@prodigy.net.mx	S	NEZAHUALCOYOTL EDO.MEX	55	10-43-34-81	victor.tejada.ma@prodigy.net.mx	S
CD. VICTORIA, TAMPS	834	315-69-03 312-51-03	rick_smith@yahoo.com.mx	S	OAXACA, OAX	951	516-4-37	ofloresdiaz@prodigy.net.mx	S
COLIMA, COL	312	3-14-30-01	tv_antonio@hotmail.com	S	ORIZABA, VER	272	72- 38 93	barreiro_ricardo@hotmail.com	S
CUERNAVACA, MOR	777	315-25-19 315-04-02	centroservicioelcm@prodigy.net.mx	S	PACHUCA, HGO	771	714- 5-61	aarotech@hotmail.com	S
CULIACAN, SIN	667	716-74-10	slancaster@culiacancd.net.mx	S	PIEDRAS NEGRAS, COAH	878	784-47-80	sanytigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-58-30 421-63-61	mmendozaelectronica@hotmail.com	S	PUEBLA, PUE	222	246-77-64 231-62-77	rossue12@prodigy.net.mx	S
CHILPANCINGO, GRO	747	471-7-73	ingdoc_gro@hotmail.com	S	QUERETARO, QRO	442	216- 6-20		S
DURANGO, DGO	618	825-30-05	www.rolyn@yahoo.com	S	SALTILLO, COAH	844	415-38-00	electronicasalud_87@hotmail.com	S
GUADALAJARA, JAL	33	36-15-72-63 36-16-63-27	www.Lasercom.com.mx	S	SAN LUIS POTOSI, S.L.P.	444	815-34-07	centro_servicioslp@prodigy.net.mx	S
HERMOSILLO, SON	662	210-54-66 210-35-66	mamujh+@prodigy.net.mx	S	SATELITE, EDO. MEX	55	55 62 59 73	mateus_sacsje@hotmail.com	S
IRAPUATO, GTO	462	105-01-10	tv_juan@hotmail.com	S	TAMPICO, TAMPS	833	254-19-00	electromovilg@prodigy.net.mx	S
LA PAZ, B.C.S.	612	122-35-69	unisa@olympo.uabcs.mx	S	TEPIC, NAY	311	212-68-93	ajar_1@hotmail.com	S
LEON, GTO	477	770-39-68	leonesmedicalaudio@hotmail.com	S	TIJUANA, B.C.N.	664	621-62-15	www.grupo2@hotmail.net	S
MATAMOROS, TAMPS	868	8 -90-10	mjg.tapiapromexa@communitymail.net	S	TOLUCA, EDO. MEX	722	214-63-09		S
MAZATLAN, SIN	669	982-47-71	e_suriel@hotmail.com	S	TOLUCA, EDO. MEX	722	214-67-94		S
MERIDA, YUC	999	920-39-05	mvaq@prodigy.net.mx	S	TORREON, COAH	871	732-49-49	jomar12@prodigy.net.mx	S
MEXICALI, B.C.N	686	56-58-00 56-59-58	rojaelectronics@prodigy.com	S	TUXTLA GUTIERREZ, CHIS	961	616- 8-08	tovalles@prodigy.net.mx	S
MEXICO D.F. ZONA ARAGON	55	57 14 36 31	philipsservice@hotmail.com	S	URUAPAN, MICH	452	524-08-68 524-07-25	rosalba@*mich_telmex_net.mx	S
MEXICO D.F. ZONA CENTRO	55	55 21 93 07	unitelmex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-4-29 93-44-44	antrej@prodigy.net.mx	S
MEXICO, D. F. ZONA SUR	55	56 36 71 03 56 36 25 79	comercializadora.electronica@hotmail.com	S	VILLAHERMOSA, TAB	993	314 -31-35 314-81-67	villatec@telmex.net.mx	S
MEXICO, D. F. ZONA NORTE	55	53 68 30 21	tissaer@prodigy.net.mx	S	ZACATECAS, ZAC.	492	922-31-83	serhermar@hotmail.com	S

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

"Evite o uso prolongado do aparelho com volume superior a 85 decibéis pois isto poderá prejudicar a sua audição."

Nível de Decibéis	Exemplos	OS RUÍDOS ABAIXO PODEM SER PERIGOSOS EM CASO DE EXPOSIÇÃO CONSTANTE	
30	Biblioteca silenciosa, sussurros leves	90	Metrô, motocicleta, tráfego de caminhão, cortador de grama
40	Sala de estar, refrigerador, quarto longe do trânsito	100	Caminhão de lixo, serra elétrica, furadeira pneumática
50	Trânsito leve, conversação normal, escritório silencioso	120	Show de banda de rock em frente às caixas acústicas, trovão
60	Ar condicionado a uma distância de 6 m, máquina de costura	140	Tiro de arma de fogo, avião a jato
70	Aspirador de pó, secador de cabelo, restaurante ruidoso	180	Lançamento de foguete
80	Tráfego médio de cidade, coletor de lixo, alarme de despertador a uma distância de 60 cm		

NOTES

CERTIFICADO DE GARANTIA NO BRASIL

Este aparelho é garantido pela Philips da Amazônia Indústria Eletrônica Ltda., por um período superior ao estabelecido por lei. Porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

A Philips da Amazônia Indústria Eletrônica Ltda. assegura ao proprietário consumidor deste aparelho as seguintes garantias , a partir da data de entrega do produto, conforme expresso na nota fiscal de compra, que passa a fazer parte deste certificado:

Garantia para rádios e reprodutores de CD portáteis (sem caixa acústica destacável): 180 dias

Garantia para os demais produtos da marca Philips: 365 dias.

Esta garantia perderá sua validade se:

- O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
- O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
- O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferente das recomendadas no manual de instruções e/ou no produto.
- O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior, bem como aqueles causados por agentes da natureza e acidentes. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado. **ESTÃO EXCLUÍDAS DA GARANTIA ADICIONAL AS PILHAS OU BATERIAS FORNECIDAS JUNTO COM O CONTROLE REMOTO.**

Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. Consumidor requerente do serviço.

A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Philips da Amazônia Indústria Eletrônica Ltda.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o Centro de Informações ao Consumidor (CIC). Em São Paulo - Capital e demais localidades com DDD 011 - tel. 2121-0203, nas demais localidades e estados - tel. 0800 701 02 03 (discagem direta gratuita), ou escreva para Caixa Postal: nº 21.315 - CEP01602-970 - São Paulo - SP, ou envie um e-mail para: cic@philips.com.br
Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00 h; aos sábados das 08:00às13:00h.

Para atendimento fora do Brasil, contate a Philips local ou a:
Philips Consumer Service
Beukenlaan 2
5651 CD Eindhoven
The Netherlands

Downloaded From Disc-Player.com Philips Manuals

LISTA DE SERVIÇO AUTORIZADO - BRASIL

ACRE
CRUZEIRO DO SUL 68-33224432
RIO BRANCO 68-32217642
RIO BRANCO 68-32249116

ALAGOAS
ARAPIRACA 82-5222367
MACEIO 82-32417237
PALMEIRA DOS INDIOS 82-4213452
UNIAO DOS PALMARES 82-32811305

AMAPÁ
MACAPA 96-2175934
SANTANA 96-2811080

AMAZONAS
MANAUS 92-36333035
MANAUS 92-36633366
MANAUS 92-32324252

BAHIA
ALAGOINHAS 75-4211128
BARREIRAS 77-36117592
BOM JESUS DA LAPA 77-4814335
BRUMADO 77-4412381
CAETITE 77-34541183
CAMACARI 71-36218288
CICERO DANTAS 75-32782767
CRUZ DAS ALMAS 75-6212839
ESPLANADA 75-4271454
EUNAPOLIS 73-2815181
FEIRA DE SANTANA 75-32232882
FEIRA DE SANTANA 75-2213427
GANDU 73-32541664
ILHEUS 73-2315995
IRECE 74-36410202
ITABERABA 75-32512358
ITABUNA 73-36137777
ITAPETINGA 77-2613003
JACOBINA 74-36211323
JEQUIE 73-35254141
JUAZEIRO 74-36116456
JUAZEIRO 74-36111002
LAURO DE FREITAS 71-3784021
MURITIBA 75-4241908
PAULO AFONSO 75-32811349
POCOES 77-4311890
RIBEIRA DO POMBAL 75-2761853
SALVADOR 71-32473659
SALVADOR 71-2675000
SALVADOR 71-32072070
SALVADOR 71-33356233
SANTO AMARO 75-32413171
SENHOR DO BONFIM 74-5413143
SERRINHA 75-32611794
STO ANTONIO JESUS 75-36314470
TEIXEIRA DE FREITAS 73-30111600
VALENCA 75-6413710
VITORIA DA CONQUISTA 77-34241183

CEARÁ
BREJO SANTO 88-5310133
CRATEUS 88-6910019
CRATO 88-5212501
FORTALEZA 85-32875506
FORTALEZA 85-40088555
IBIAPINA 88-36531223
IGUATU 88-35810512
ITAPIPOCA 88-6312030
JUAZEIRO DO NORTE 88-35112667
LIMOEIRO DO NORTE 88-4231938
OROS 88-5841271
SOBRAL 88-36110605
TIANGUA 88-36713336
UBAJARA 88-6341233

DISTRITO FEDERAL
BRASILIA 61-32269898
BRASILIA 61-33016666
GAMA 61-5564840

ESPÍRITO SANTO
ALEGRE 28-35526349
ARACRUZ 27-32561251
BAIXO GUANDU 27-37321142
BARRA S FRANCISCO 27-37562245
CASTELO 28-35420482
COLATINA 27-37222288
GUARAPARI 27-33614355
LINHARES 27-33710148
S GABRIEL DA PALHA 27-37271153
SAO MATEUS 27-37633806
VILA VELHA 27-32891233
VITORIA 27-32233899

GOÍAS
ANAPOLIS 62-3243562
CACU 64-6561811
CALDAS NOVAS 64-4532878
CATALAO 64-4412786
FORMOSA 61-6318166
GOIANIA 62-32919095
GOIANIA 62-32292908
GOIATUBA 94-34952272
INHUMAS 62-5111840
IPAMERI 62-4511184
ITAPURANGA 62-3551484
ITUMBIARA 64-34310837
JUSSARA 62-3731806
LUZIANIA 61-6228519
MINEIROS 64-6618259
PIRES DO RIO 64-4611133
RIALMA 62-3971320
RIO VERDE 64-36210173
TRINDADE 62-5051505
URUACU 62-3571285

MARANHÃO
ACAILANDIA 99-35381889
BACABAL 99-36212794
BALSAS 99-5410113
CAROLINA 98-7311335
CAXIAS 99-35212377
CHAPADINHA 98-4711364
CODO 99-36611277
CODO 99-36612942
COELHO NETO 98-34731351
IMPERATRIZ 99-35244969
PEDREIRAS 99-36423142
PRESIDENTE DUTRA 99-36631815
SANTA INES 98-36537553
SAO JOSE DE RIBAMAR 98-2241581
SAO LUIS 98-32323236
SAO LUIS 98-32315276

MATO GROSSO
ALTA FLORESTA 66-35212460
ALTO ARAGUAIA 66-4811726
BARRA DO GARGAS 66-4011394
CUIABA 65-36230421
LUCAS DO RIO VERDE 65-5491333
PONTES E LACERDA 65-2662326
PRIMAVERA DO LESTE 66-4981682
RONDONOPOLIS 66-4233888
SINOP 66-5314592
TANGARA DA SERRA 65-3261431
VARZEA GRANDE 65-6826502

MATO GROSSO DO SUL
AMAMBAI 67-4811543
CAMPO GRANDE 67-33242804
CAMPO GRANDE 67-3831540
CAMPO GRANDE 67-3213898
DOURADOS 67-4217117
IVINHEMA 67-4421244
NAVIRAI 67-4612486
NOVA ANDRADINA 67-4413851
PONTA PORA 67-4314313
RIO BRILHANTE 67-4527950
TRES LAGOAS 67-5212007

MINAS GERAIS
ALFENAS 35-32927104
ALMENARA 33-7211234
ANDRADAS 35-37312970
ARAXA 34-36611132
ARAXA 34-36691869
ARCOS 37-33513455
BAMBUI 37-34311473
BARBACENA 32-33310283
BELO HORIZONTE 31-32257262
BELO HORIZONTE 31-32254066
BELO HORIZONTE 31-34420944
BELO HORIZONTE 31-34181919
BELO HORIZONTE 31-32957700
BELO HORIZONTE 31-34491000
BELO HORIZONTE 31-21027373
BETIM 31-35322088
BOM DESPACHO 37-35212906
BOM DESPACHO 37-35222511
CARANGOLA 32-37412017
CASSIA 35-35412293
CONGONHAS 31-37311638
CONS LAFAIETE 31-37637784
CONTAGEM 31-33912994
CONTAGEM 31-33953461
CORONEL FABRICIANO 31-38411804
CURVELO 38-37213009
DIVINOPOLIS 37-32212353
FORMIGA 37-33214177
FRUTAL 34-34235279
GOV. VALADARES 33-32716650
GUAXUPE 35-35513891
GUAXUPE 35-35514124
IPATINGA 31-38222332
ITABIRA 31-38316218
ITAJUBA 35-36211315
ITAPECERICA 37-33411326
ITAPECERICA 37-33411326
ITAUNA 37-32412468
ITUIUTABA 34-32682131
JOAO MONLEVADE 31-38512909
JOAO MONLEVADE 31-38521112
JOAO PINHEIRO 38-35611327
JUIZ DE FORA 32-30842584
JUIZ DE FORA 32-32151514
LAGOA DA PRATA 37-32613493
LAVRAS 35-38219188
MANHUACU 33-33314735
MONTE CARMELO 34-38422082
MONTE SANTO DE MINAS 35-35911888
MONTES CLAROS 38-32218925
MURIAE 32-37224334
MUZAMBINHO 35-5712419
NANUQUE 33-36212165
NOVA LIMA 31-35412026
OLIVEIRA 37-33314444
PARA DE MINAS 37-32316369
PARA DE MINAS 37-32321975
PARACATU 38-36711250
PASSOS 35-35214342
PATOS DE MINAS 34-38222588
PATROCINIO 34-38311531
PITANGUI 37-32716232
PIUMHI 37-33714632
POCOS DE CALDAS 35-37121866
POCOS DE CALDAS 35-37224448
PONTE NOVA 31-38172486
POUSO ALEGRE 35-34212120
S SEBASTIAO PARAISO 35-35313094
S SEBASTIAO PARAISO 35-35312054
SANTOS DUMONT 32-32516369
SAO JOAO DEL REI 32-33718306
STO ANTONIO MONTE 37-32811258
TEOFILO OTONI 33-35225831
TIMOTEO 31-38482728
UBA 32-35323626
UBERABA 34-33332520
UBERLANDIA 34-32123636
UBERLANDIA 34-32360764
VARGINHA 35-32227889
VARZEA DA PALMA 38-37311548
VAZANTE 34-38131420
VICOSA 31-38918000

PARÁ
ABAETETUBA 91-37512272
BELEM 91-32690400
BELEM 91-32421090
CAPANEMA 91-34621100
CASTANHAL 91-37215052
ITAITUBA 93-5181545
MARABA 94-3211891
OBIDOS 93-5472116
PARAGOMINAS 91-30110778
PORTO TROMBETAS 93-3549160
SANTAREM 93-3523532

PARAÍBA
CAMPINA GRANDE 83-3212128
ESPERANCA 83-3612273
GUARABIRA 83-2711159
JOAO PESSOA 83-3246968
JOAO PESSOA 83-3244604
JOAO PESSOA 83-3221046
NOVA FLORESTA 83-3741014
SAPE 83-2832479
SOLANEA 83-3631241

PARANÁ
AMPERE 46-5471605
ANTONINA 41-3432178
APUCARANA 43-3422530
ARAPONGAS 43-2753723
ASSIS CHATEAUBRIAND 44-5285181
BANDEIRANTES 43-5421711
CAMPO MOURAO 44-3523897
CASCAVEL 45-3225400
CIANORTE 44-6292842
CURITIBA 41-3333476
CURITIBA 41-3264879
CURITIBA 41-3253439
FOZ DO IGUACU 45-3523302
FOZ DO IGUACU 45-3523411
FRANCISCO BELTRAO 46-3523323
GUARAPUAVA 42-3623532
IBAITI 43-5461162
IBIPORA 43-2581863
IRATI 42-3422133
LAPA 41-3622241
LOANDA 44-4252053
LONDRINA 43-3324100
MANDAGUARI 44-2331335
MARINGA 44-3226462
MEDIANEIRA 45-3264258
PALMEIRA 42-2523006
PARANAGUA 41-3422580
PATO BRANCO 46-3224278
PONTA GROSSA 42-3222659
RIO NEGRO 47-3645025
ROLANDIA 43-2561947
S J DOS PINHAIS 41-3282252
S MIGUEL DO IGUACU 45-5651429
SANTA FE 44-2471147
SAO JORGE D' OESTE 46-5341305
STO ANTONIO PLATINA 43-3534180
TELEMACO BORBA 42-3272604
TOLEDO 45-3252247
UMUARAMA 44-3623123

PERNAMBUCO
BELO JARDIM 81-3726191
CABO STO AGOSTINHO 81-3521182
CAMARAGIBE 81-3458124
CARUARU 81-3722023
FLORESTA 81-8771274
GARANHUNS 87-3761109
GARANHUNS 87-3761008
PAULISTA 81-3433114
RECIFE 81-3231339
RECIFE 81-2126211
RECIFE 81-3465604
RECIFE 81-3462909
SALGUEIRO 87-3871630
SERRA TALHADA 87-3831140

PIAUÍ
CAMPO MAIOR 86-3252137
FLORIANO 89-5221154
OEIRAS 89-4621066
PARNAIBA 86-3222877
PICOS 89-4221446
PICOS 89-3415513
TERESINA 86-3221353
TERESINA 86-3223083
TERESINA 86-3221467

RIO DE JANEIRO
B JESUS ITABAPOANA 22-3831223
BELFORD ROXO 21-2761606

Downloaded From Disc-Player.com Philips Manuals

LISTA DE SERVIÇO AUTORIZADO - BRASIL

CARO FRIO 22-26451819
CAMPOS GOYTACAZES 22-27271499
CANTAGALO 22-25553303
DUQUE DE CAXIAS 21-27711508
ITAOCARA 22-38617740
ITAPERUNA 22-38220605
MACAE 22-27676235
MACAE 22-27591358
MAGE 21-26330605
NITEROI 21-26700157
NOVA FRIBURGO 22-25277692
NOVA IGUACU 21-26675663
PETROPOLIS 24-22312737
RESENDE 24-33550101
RIO DE JANEIRO 21-25894622
RIO DE JANEIRO 21-25892030
RIO DE JANEIRO 21-25097136
RIO DE JANEIRO 21-24315426
RIO DE JANEIRO 21-31579290
RIO DE JANEIRO 21-33916353
RIO DE JANEIRO 21-22367814
RIO DE JANEIRO 21-31592187
RIO DE JANEIRO 21-38675252
RIO DE JANEIRO 21-25714999
RIO DE JANEIRO 21-24451123
SAO GONCALO 21-27013214
TERESOPOLIS 21-27439467
TRES RIOS 24-22555687
TRES RIOS 24-22521388

RIO GRANDE DO NORTE

CAICO 84-4171844
MOSSORO 84-33147809
NATAL 84-32231249
NATAL 84-32132345
PAU DOS FERROS 84-3512334

RIO GRANDE DO SUL

AGUDO 55-2651036
ALEGRETE 55-34221969
BAGE 53-32411295
BENTO GONCALVES 54-4526825
CAMAQUA 51-36711686
CAMPINAS DO SUL 54-3661300
CANELA 54-32821551
CAPAO DA CANOA 51-6652638
CARAZINHO 54-3302292
CAXIAS DO SUL 54-32153107
CAXIAS DO SUL 54-2268020
CERRO LARGO 55-33591973
CORONEL BICACO 55-35571397
ERECHIM 54-3211933
ESTANCIA VELHA 51-35612142
FARROUPILHA 54-32683603
FAXINAL DO SOTURNO 55-32631150
FLORES DA CUNHA 54-7977625
FREDERICO WESTPHALEN 55-37441850
GETULIO VARGAS 54-3411888
GIRUA 55-33611764
GRAVATAI 51-4880830
HORIZONTINA 55-35371680
IBIRAIARAS 54-3551359
IJUI 55-33377766
IMBE 51-36777704
LAJEADO 51-37145155
MARAU 54-33474571
MONTENEGRO 51-6374187
NONOAI 54-3621126
NOVA PRATA 54-32421328
NOVO HAMBURGO 51-35823191
OSORIO 51-36632524
PALMEIRA MISSOES 55-37421407
PANAMBI 55-33753488
PASSO FUNDO 54-33111104
PELOTAS 53-32223633
PORTO ALEGRE 51-32226941
PORTO ALEGRE 51-33256653
PORTO ALEGRE 51-32268834
RIO GRANDE 53-32323711
SANTA DO LIVRAMENTO 55-32411899
SANTA MARIA 55-32222235
SANTA ROSA 55-35121991
SANTA VITORIA DA PALMAR 53-32633992
SANTO ANGELO 55-33131183
SANTO AUGUSTO 55-37811511
SAO BORJA 55-34311850
SAO ECO DE PAULA 54-2441466
SAO GABRIEL 55-2375833
SAO JOSE DO OURO 54-3571216
SAO LUIZ GONZAGA 55-33531363
SAO MARCOS 54-2911467
SOBRADINHO 51-37421409
STA CRUZ DO SUL 51-37155456
STA CRUZ DO SUL 51-37153048
TAPEJARA 54-3441353
TAPERA 54-3851160
TAQUARI 51-6531291
TORRES 51-6641940
TRES DE MAIO 55-35352101
TRES DE MAIO 55-35358727
URUGUAIANA 55-34121791
VACARIA 54-2311396
VENANCIO AIRES 51-37411443
VERA CRUZ 51-37181350

RONDÔNIA

ARIQUEMES 69-35353491
CACOAL 69-4431415
CEREJEIRAS 69-33422251
GUAJARA MIRIM 69-35414430
JI PARANA 69-34211891
PORTO VELHO 69-32273377
ROLIM DE MOURA 69-4421170
VILHENA 69-33223321

RORAIMA

BOA VISTA 95-32249603
BOA VISTA 95-6233456

SANTA CATARINA

BLUMENAU 47-3227742
CANOINHAS 47-6223615
CANOINHAS 47-6223615
CAPINZAL 49-35552266
CHAPECO 49-33223304
CHAPECO 49-33221144
CONCORDIA 49-34423704
CRICIUMA 48-34375155
CUNHA PORA 49-6460043
CURITIBANOS 49-32410851
DESCANSO 49-36230245
FLORIANOPOLIS 48-32251449
INDAIAL 47-33333275
JOAO DO OESTE 49-36341289
ITAJOPOLIS 476-322282
ITAJAI 47-33441777
JARAGUA DO SUL 47-33722050
JOACABA 49-35220418
JOINVILLE 47-33431146
LAGES 49-2232355
LAGES 49-37744414
LAGUNA 48-36461221
LAURO MULLER 48-4643202
MARAVILHA 49-6640052
PINHALZINHO 497-661014
PORTO UNIAO 42-35332839
RIO DO SUL 47-5711920
SAO MIGUEL D'OESTE 49-36220026
SEARA 49-4571034
SOMBRIO 48-5331735
TAIO 478-670576
TUBARAO 48-6774448
TUBARAO 48-6261651
TURVO 48-5250373
URUSSANGA 484-651137
VIDEIRA 49-35660376
XANXERE 49-4333026

SÃO PAULO

AGUAS DE LINDOIA 19-38241524
AMERICANA 19-34062914
AMPARO 19-38072674
ARACATUBA 18-36218775
ARARAQUARA 16-33368710
ATIBAIA 11-44118145
AVARE 14-37322142
BARRETOS 17-33222742
BATATAIS 16-37614455
BAURU 14-32239551
BIRIGUI 18-36124011
BOTUCATU 14-38821081
BOTUCATU 14-38155044
CAMPINAS 19-37369199
CAMPINAS 19-32544819
CAMPINAS 19-33336498
CAMPINAS 19-37377500
CAMPO LIMPO PAULISTA 11-40392000
CAMPOS DO JORDAO 12-36622142
CATANDUVA 17-35337574
CERQUEIRO 15-37847121
CRUZEIRO 12-31433859
DIADEMA 11-40430669
DRACENA 18-38212479
FERNANDOPOLIS 17-33423921
FRANCA 16-37223898
FRANCO DA ROCHA 11-44492608
GUARUJA 13-33582942
GUARULHOS 11-64513576
GUARULHOS 11-64431153
IGARAPAVA 16-31724600
INDAIATUBA 19-38753031
ITAPETININGA 15-32710936
ITAPIRA 19-38633802
ITARARE 15-33522743
ITU 11-40230188
ITUVERAVA 16-7293365
JABOTICABAL 16-32021580
JALES 17-36324479
JAU 14-36222117
JUNDIAI 11-45862182
LEME 19-35713528
LIMEIRA 19-34413179
MARILIA 14-34547437
MATAO 16-33821046
MAUA 11-45145233
MOGI DAS CRUZES 11-47941814
MOGI-GUACU 19-38181171
MOGI-MIRIM 19-38624401
OLIMPIA 17-2812184
OSASCO 11-36837343
OURINHOS 14-33225457
PIRACICABA 19-34340454
PIRASSUNUNGA 19-35614091
PORTO FERREIRA 19-35812441
PRES PRUDENTE 18-2225168
PRES. EPITACIO 18-2814184
PRES.PRUDENTE 18-2217943
PROMISSAO 14-33411696
RIBEIRAO PRETO 16-36106989
RIBEIRAO PRETO 16-36368836
RIBEIRAO PRETO 16-36107353
RIO CLARO 19-35348543
S BERNARDO CAMPO 11-41257000
S BERNARDO CAMPO 11-43681788
S CAETANO DO SUL 11-42214334
S JOAO BOA VISTA 19-36237990
S JOSE CAMPOS 12-39139508
S JOSE DO RIO PARDO 19-36085760
S JOSE RIO PRETO 17-32325680
S. JOSE RIO PRETO 17-2352381
SALTO 11-40296563
SANTO ANDRE 11-49905788
SANTOS 13-32272947
SANTOS 13-37847339
SAO CARLOS 16-33614913
SAO JOSE DO CAMPOS 12-39122778
SAO JOSE RIO PRETO 17-7355741
SAO PAULO 11-2964622
SAO PAULO 11-67036116
SAO PAULO 11-69791184
SAO PAULO 11-38659897
SAO PAULO 11-62156667
SAO PAULO 11-69545517
SAO PAULO 11-36726766
SAO PAULO 11-66940101
SAO PAULO 11-32077111
SAO PAULO 11-39757996
SAO PAULO 11-62976464
SAO PAULO 11-56679695
SAO PAULO 11-38733333
SAO PAULO 11-55321515
SAO PAULO 11-62809411
SAO PAULO 11-32217317
SAO PAULO 11-37714709
SAO PAULO 11-25770899
SAO PAULO 11-37777311
SAO ROQUE 11-47842509
SAO VICENTE 13-34678031
SOROCABA 15-32741170
SOROCABA 15-32741170
STA BARBARA D'OESTE 19-34631211
TABOAO DA SERRA 11-47871480
TAQUARITINGA 16-37574039
TAUBATE 12-36719080
TUPA 14-34967596
VINHEDO 19-38765310
VOTUPORANGA 17-34215776

SERGIPE

ARACAJU 79-32119764
ARACAJU 79-32176080
ESTANCIA 79-5222325
ITABAIANA 79-4313023
LAGARTO 79-6312656

TOCANTINS

ARAGUAINA 63-4212857
ARAGUAINA 63-4111818
GUARAI 63-34641590
GURUPI 63-33511030
GURUPI 63-33124470

Downloaded From Disc-Player.com Philips Manuals

Meet Philips at the Internet
http://www.philips.com

PET718

Printed in China WK812

Downloaded From Disc-Player.com Philips Manuals

Downloaded From Disc-Player.com Philips Manuals